


What does the System Help button do?

Tell Me

The System Help button in the bottom left corner of the touch panel home screen is used to contact Classroom Support via the intercom.

1. To contact Classroom Support, press the **System Help** button.

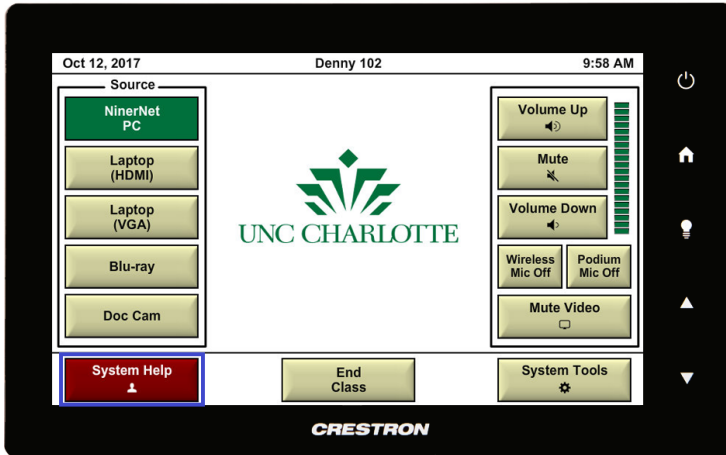

2. You will then hear the message, "Your call is being connected."
3. A Classroom Support technician will answer your call through the intercom and will assist you with any issues.



The System Help button does not open any type of on-screen guide or other reference material.

Related FAQs

- [How do I connect a laptop to the smart podium using HDMI?](#)
- [What does the System Help button do?](#)
- [How do I use the podium microphone?](#)
- [How do I shut down the smart podium system using the touch panel?](#)
- [How do I select a source using the touch panel?](#)