

 
# How do I manually raise or lower the projector screen?

## Tell Me


There are two options to use to raise or lower the projector screen manually: through the touch panel or by using a wall switch.

### Touch Panel Method:

1. On the home page of the touch panel, press the **System Tools** button in the bottom right corner.

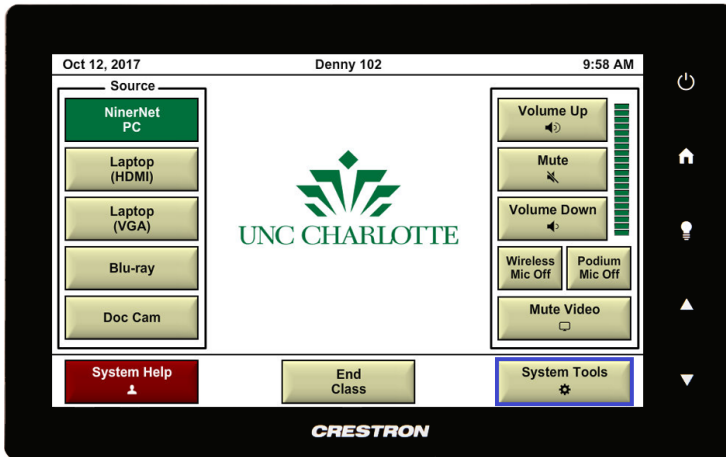


2. The projector screen controls are on the right side of the System Tools page. Press **Screen Up** to raise the screen. Press **Screen Down** to lower the screen.

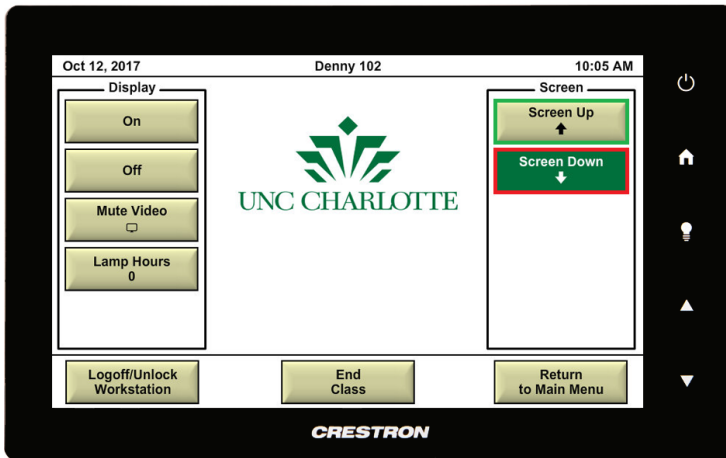

### Wall Switch Method:

1. Locate the **Projector Screen Wall Switch**. It can typically be found on a wall near the projector screen.

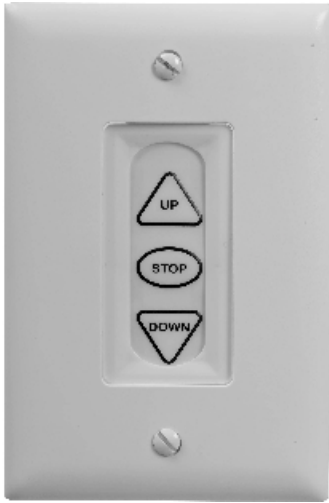

2. To raise the screen, press the **UP** button. To lower the screen, press the **DOWN** button. To pause the screen while it is being raised or lowered, press the **STOP** button.

---

## Related FAQs

- [How do I connect a laptop to the smart podium using HDMI?](#)
- [How do I request software to be installed on a classroom computer?](#)
- [How do I sign out \(log off\) of Windows 10?](#)
- [What does the System Help button do?](#)
- [How do I use the podium microphone?](#)